


PcCR 1417

Field Deployment

6 Step Setup


Guide

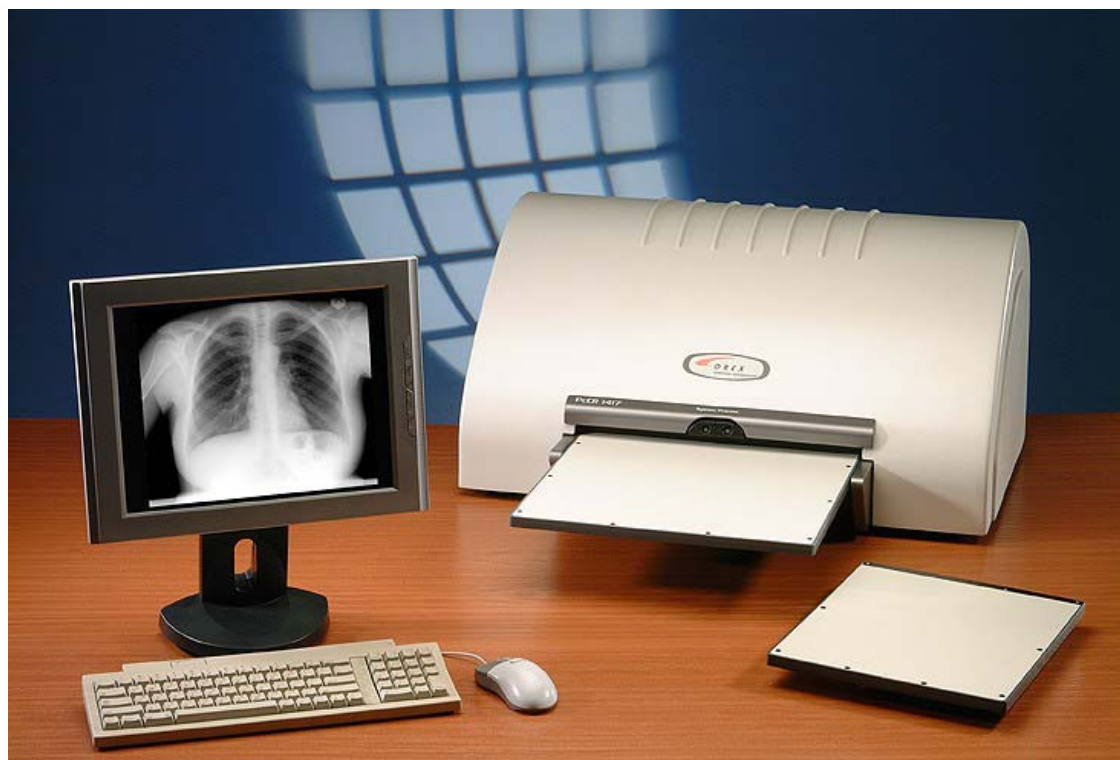

January 2003

1

Release the 18 latches along the bottom of the case.
Lift the cover off using the handles Located on the either side of the cover.

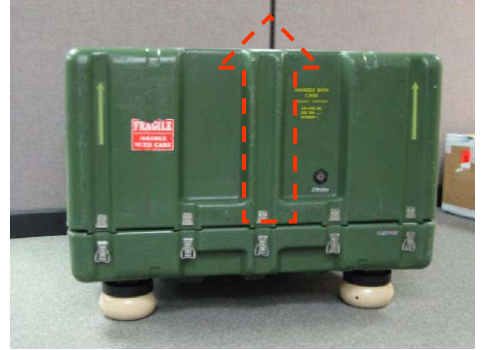

2

Lift the system out of the case by grasping the base at four corners.
Do not use the black tray platform to lift the system.




3

Connect the system to the toughbook via USB cable.
Connect the power cord to the UPS.
Connect UPS to power source





4

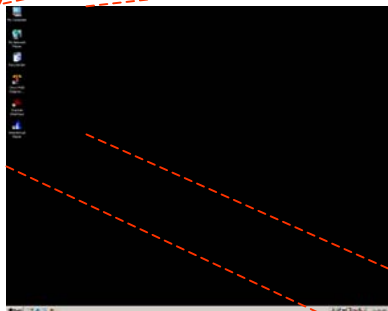


● Double click “onyxrad” icon to launch program.

5

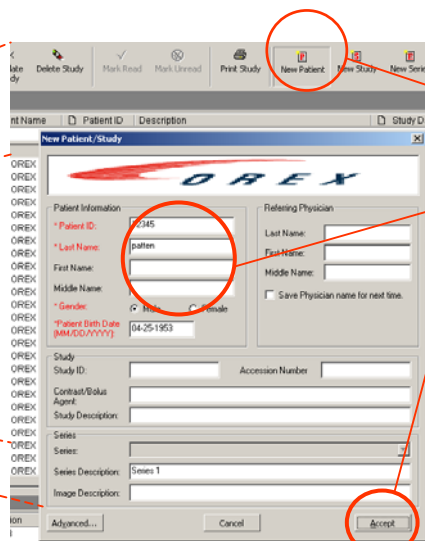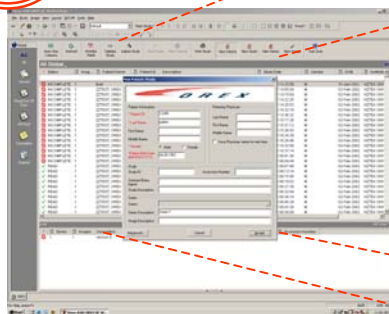

● Click” new patient” and enter patient information.
● Click accept to continue.

6

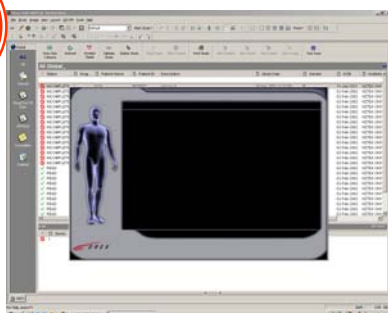

Insert exposed cassette select appropriate body part and press the **Scan** button